

"The original makers of SMITHS Instruments"

Instructions for Flight, Prism and derivative 52mm Monitoring Instruments

Independently tested and approved to 95/54/EC

Designed and manufactured under ISO9001:2015quality standard

Caerbont Automotive Instruments Ltd Abercrave, Swansea, SA9 1SH Tel: +44 (0) 1639 732200

www.caigauge.com

Installation Guide

Flight & Prism range 52mm monitoring instruments Part numbers:

- FCT1- and PCT1- series (Temperature)
- FFC1- and PFC1- series (Fuel)
- FMP1- and PMP1- series (Boost)
- FOP1- and POP1- series (Oil Pressure)

- FOT1- and POT1- series (Oil Temperature)
- FVO1- and PVO1- series (Voltmeter)
- PG1310-03CB (Cobra Fuel Pressure)
- EAPx (Air Pressure)

Application Notes

- For fitment to negative earth vehicles only.
- Operating voltage: see 2nd section of part number

xxxx-1xxx-xxx = Positive 11 - 17 volts DCxxxx-2xxx-xxx = Positive 22 - 30 volts DC

Caution Disconnect The Negative Battery Cable Prior To Any Installation

| INFO | DRMATION: |
|-------------------|--|
| | ble to Flight, Prism and ve Instruments |
| CAI | |
| Part Number | Description |
| PTTR2300-10-4NKIT | Oil Pressure, 1/4NPT |
| PTTR2300-10-8NKIT | Oil Pressure, 1/8NPT |
| PTTR2300-03-4NKIT | Boost & Fuel, 1/4, NPT |
| TT3001-8N | Coolant Temp Sender, 1/8 NPT |
| TT3005-8N | Oil Temp Sender, 1/8 NPT |
| TA9110-000 | Fuel Sender, 5 hole flange |
| EMP34-1 | Speed Sender, M8 x 33mi |

| connector and fly | s are supplied with mating ying leads to be connected as follows |
|-------------------|--|
| Green | Ign. switched 12V |
| Black | Ground |
| Green/orange | To white/black on gauge harness |

| | | Harness Co | Harness Connections | |
|-------------------------------|--|-----------------------------|---|--------------|
| Instrument Green | Green | Black | Red/White | White/Black |
| Coolant & Oil Temperature | Coolant & Oil Switched ignition positive Temperature supply (via 3A fuse) | Chassis or battery negative | Chassis or battery Instrument illumination positive negative | Sender input |
| Fuel | Switched ignition positive supply (via 3A fuse) | Chassis or battery negative | Chassis or battery Instrument illumination positive negative supply (side light feed) | Sender input |
| Oil, Boost & fuel Pressure | Oil, Boost & Switched ignition positive fuel Pressure supply (via 3A fuse) | Chassis or battery negative | Chassis or battery Instrument illumination positive negative supply (side light feed) | Sender input |
| Voltmeter | Switched ignition positive supply (via 3A fuse) | Chassis or battery negative | Chassis or battery Instrument illumination positive negative | Not used |

PIL049 Ver 4